

Time Change Instructions

This document outlines how to change the time on the following system:

Samsung DCS

1. Press: Trsf Key - 200-1234 or 1933
2. Press: 1 to enable
3. Press: Speaker Key
4. Press: 505
5. Enter: Day No Month Date Year
6. Then enter the time - This is a 24 hour clock

Press the Trsf Key to finish.