

Time Change Instructions

This document outlines how to change the time on the following system:

Siemens Hicom Office Range (v1.0, v2.2)

1. The time can only be set from extension 11 or 100, which must be an 'Optiset' display terminal.
2. Leaving the handset down, press * and dial 95.
3. Press the TICK button, followed by 2, followed by the TICK button.
4. Enter the time in 24 hour format, 2 digits for the hour, 2 digits for the minutes.

Press the TICK key, followed by speaker.